


# CORRECT INSTALLATION


## Type AMD

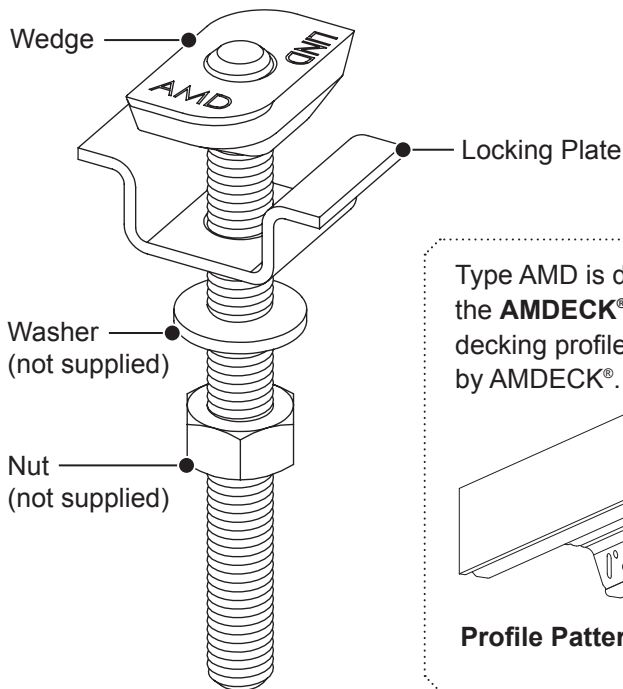

Approvals



Type AMD is designed for use with the **AMDECK® 60** and **AMDECK® 80** decking profiles manufactured by AMDECK®.

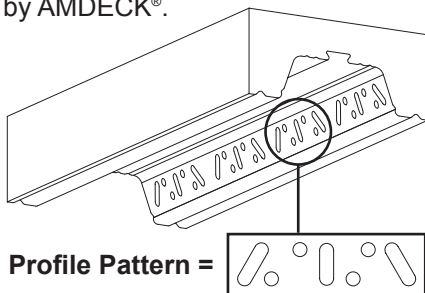


| Product Code | Rod (min 4.6) | Tightening Torque |
|--------------|---------------|-------------------|
| AMD06*       | M6            | 10 Nm             |
| AMD08*       | M8            | 10 Nm             |
| AMD10*       | M10           | 10 Nm             |

\* A washer is required for AMD06. Washers are optional for AMD08 and AMD10.  
For safe working loads refer to **[www.Lindapter.com](http://www.Lindapter.com)**

# CORRECT INSTALLATION

## Type AMD

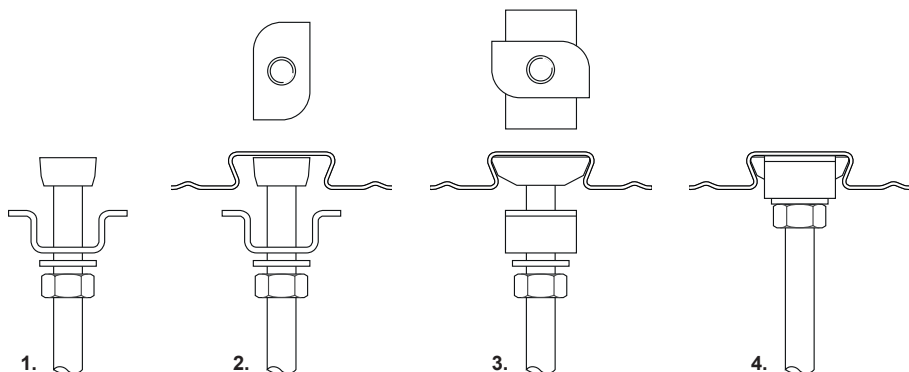

Ref: AMD\_JUN21

### How to install

- 1) Pre-assemble the Locking Plate and wedge (flat surface facing up) onto the threaded rod.
- 2) Insert wedge into the re-entrant channel of the decking and rotate 90°.
- 3) Slide the plate up the threaded rod, over the wedge, to lock it in position into the channel.
- 4) Tighten a nut beneath the plate and washer to hold the assembly in position.

### Notes

- Install the decking fixings after the concrete has been poured and has reached full strength.
- If the decking profile is deformed / distorted, the fixing should not be installed. If in doubt, please contact Lindapter's Technical Support department for advice.